




Drain the cooling liquid, disassemble the seat, side plastics, radiators and the plastic cable organizer on the right side of the frame.

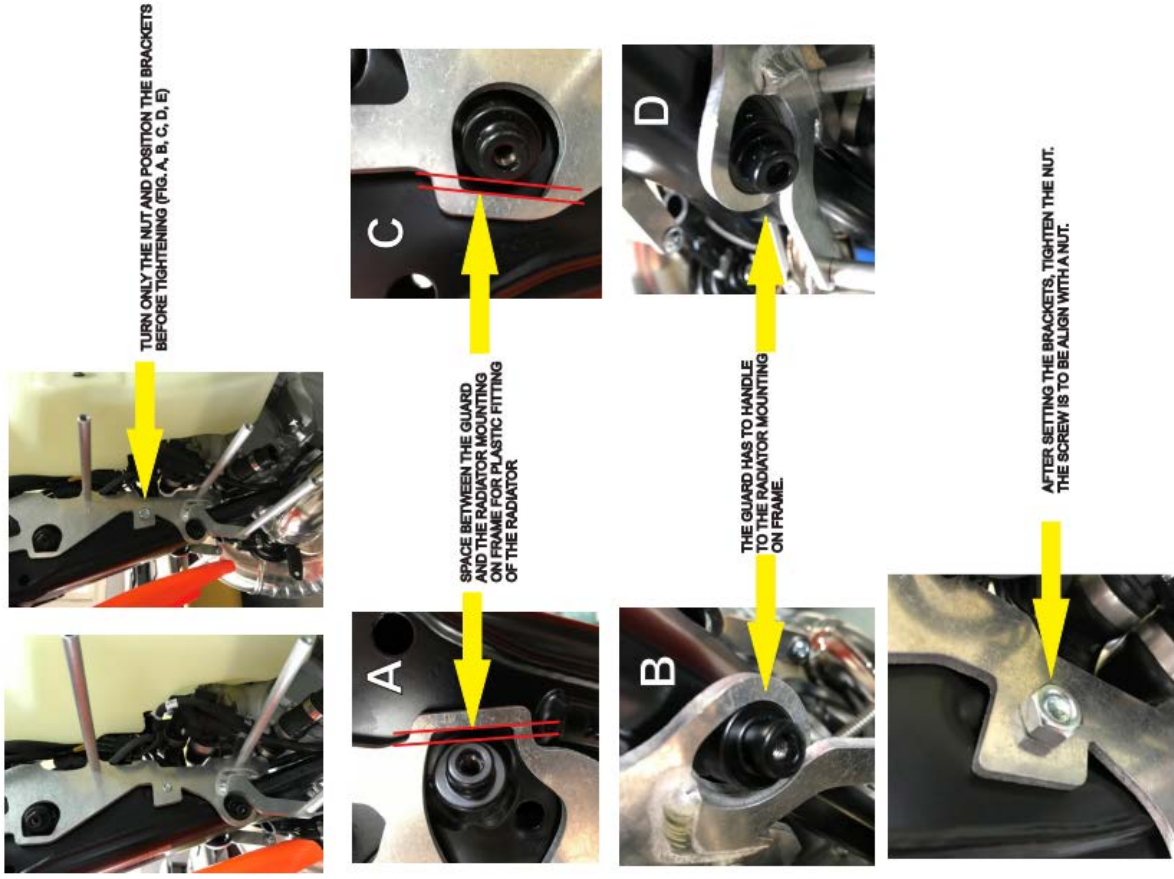

INSTALL A PLASTIC CABLE ORGANIZER.

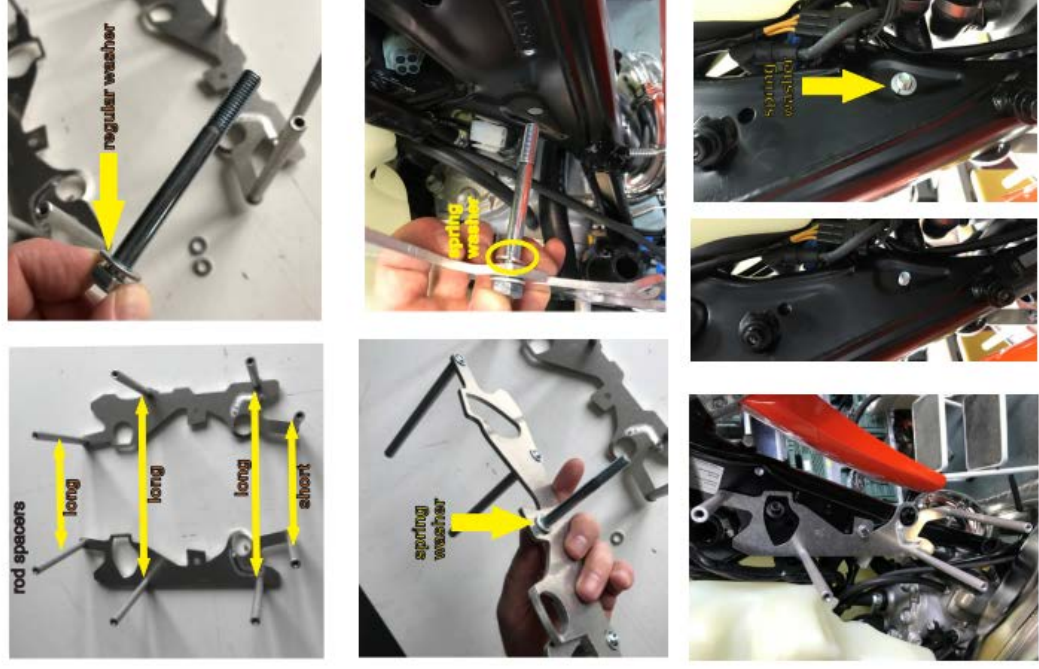

INSTALL RADIATORS

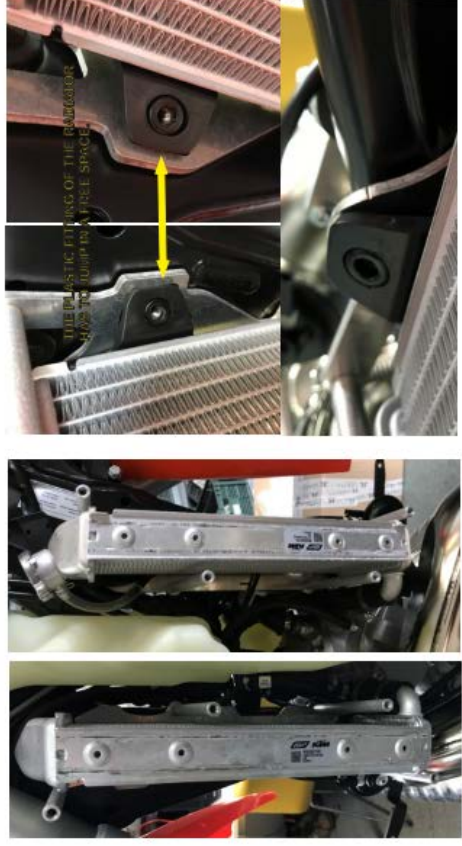



SCREWS WITH
SMALL HEAD



TIGHTEN THE SIDE PLASTIC AND SCREW
REMAINING SCREWS ON THE TANK.



GRAB FRONT SCREWS



TIGHTEN PLASTICS, SET UP SEAT, FILL THE RADIATORS WITH LIQUID.



READY!